

- A.** Date and time
- B.** Channel status
- C.** Confirm button
- D.** Return button
- E.** Up button
- F.** Down button
- G.** Connect to BeHive host
- H.** Connect to the next device
- I.** 4 channel status indicator lights, the light is on to indicate a connection, and the light is off to indicate no connection
- J.** Power indicator


## Specification

Device Operating Voltage	120-240VAC 50/60Hz
Total Input Current	< 15A (US)
	< 13A (UK)
	< 10A (AU)
	< 16A (EU)
Maximum Current per Channel	8A

## Package Contents



BeLeaf Smart Socket	*1
5 Meters RJ12 Cable	*1
Expansion Screw Set	*2

## Installation

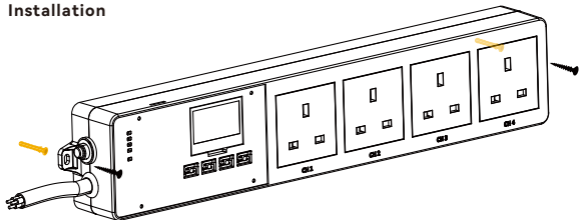

As shown in the figure, use the expansion screw set to fix the product on the wall.

## Operating Instructions

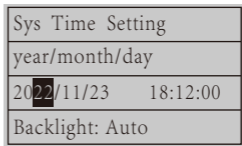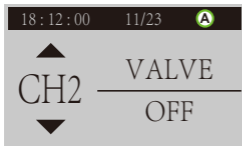

- In the main interface state, press the up and down buttons to cycle through each channel's function mode and status.
- Press the confirm button, the cursor will blink, and click on the A area to enter the time and date settings and screen backlight status settings. The up and down buttons can move the cursor. Move to the position to be changed, press the confirm button, and the cursor will blink to enter the change state. The up button increases the number, and the down button decreases the number. After modifying, press confirm.
- Press the return button to return to the previous step. If there is no operation for 10 seconds, it will return to the main interface.